
GEBRAUCHSANWEISUNG | F 5015

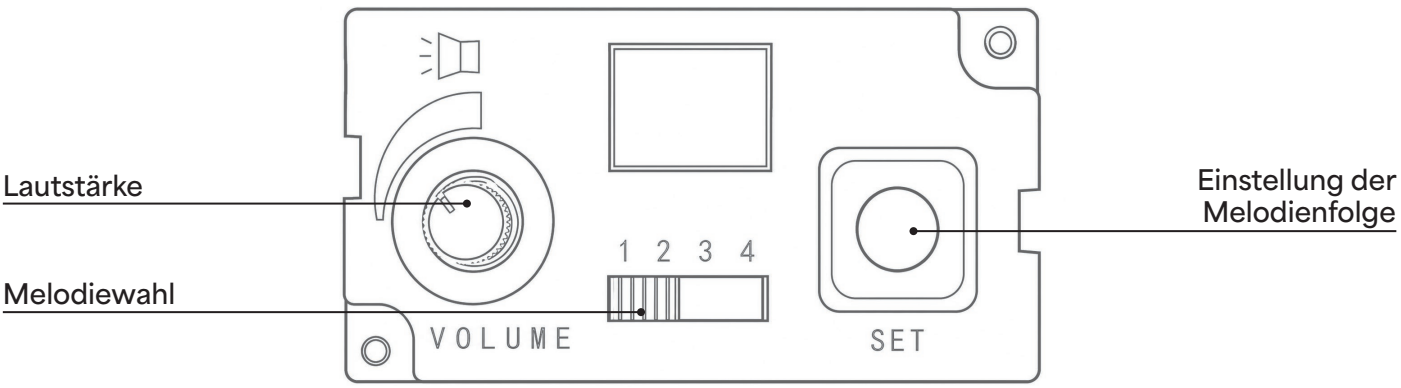

1 2 3 4

Vier Klangvarianten:
1. Notre-Dame + Stundenschlag
2. Westminster 1 + Stundenschlag
3. Westminster 2 + Stundenschlag
4. Abwechselnd 12 verschiedene Kurzmelodien

Die oben genannten Stundenschläge ertönen alle von 06:00 Uhr bis 21:00 Uhr; von 22:00 Uhr bis 05:00 Uhr ertönen keine Stundenschläge.

1. Blumenwalzer
2. Funkel, funkel kleiner Stern
3. Greensleeves
4. An der blauen Donau
5. Für Elise
6. Brahms Walzer
7. Schöner Träumer
8. Haydn Serenade
9. Schubert Serenade (Ständchen)
10. Auf Flügeln des Gesanges
11. Serenade - Liebesträume
12. Schlafe, mein Kind

Inbetriebnahme

Legen Sie 2x 1,5 V Alkaline Batterien LR6 in die Rückseite des Uhrwerkes und 2x 1,5 V Alkaline Batterie LR6 für das Schlagwerk von oben polrichtig ein. Das Uhrwerk geht auf Empfang. Nach dem Empfang des DCF Zeitzeichens und dessen interner Verarbeitung (bis zu 10 min) stellt sich die Uhr automatisch auf die richtige Zeit ein. Während des Einstellvorgangs sollten Sie die Position der Uhr nicht ändern. Falls sich die Uhrzeit nicht einstellt, die Uhr an einen anderen Ort bringen, die Batterie herausnehmen und nach einer Minute wieder einsetzen. Nach erfolgreichem Einstellen, können Sie die Uhr in die gewünschte Position aufhängen und das Pendel einhängen. Die Uhr verfügt über eine automatische Nachtabschaltung zwischen 22:00 Uhr und 5:00 Uhr.

Technische Daten

Betriebsspannung:	3 V
Zul Betriebstemperatur:	-5°... +50°C
Batterietyp:	AA/LR6
Zeitvergleich mit dem Sender:	9x/24h
Batterielaufzeit:	12 Mon
Umstellung Sommerzeit:	Ca. 10 Min

Mögliche Störquellen

Nicht funkentstörte Haushaltsgeräte. Fernsehgeräte im Abstand von weniger als 2 m. Maschinen mit HF Streufeldern. Im größeren Umkreis zum Sender-Standort, 1500 km und mehr, können aufgrund der speziellen Ausbreitung von Langwellen topographische und meteorologische Verhältnisse den Empfang beeinträchtigen.

Störfall

Zeiger bewegen sich nach Einlegen der Batterie nicht. Uhr stellt sich nicht auf die aktuelle Zeit ein, weil sie innerhalb von 10 Minuten nach Einlegen der Batterie kein Zeitprotokoll empfangen hat.

Maßnahme


Batteriespannung, Batteriekontakt und richtige Polung überprüfen. Wählen Sie einen geeigneten Standort mit genügend Abstand zu anderen Haushaltsgeräten, optimal ist Fensternähe. Wenn nach mehrmaligem Wiederholen des Startvorgangs die Zeit sich nicht einstellt, dann ist der Sender gestört. Einige Stunden abwarten, dann den Startvorgang wiederholen.

Elektro-Altgeräte umweltgerecht entsorgen. Elektrogeräte enthalten Schadstoffe und wertvolle Ressourcen. Jeder Verbraucher ist deshalb gesetzlich verpflichtet, Elektro-Altgeräte an einer zugelassenen Sammel- oder Rücknahmestelle abzugeben. Dadurch werden sie einer umwelt- und ressourcenschonenden Verwertung zugeführt. Sie können Elektro-Altgeräte kostenlos beim lokalen Wertstoff-/Recyclinghof abgeben. Für weitere Informationen zu diesem Thema wenden Sie sich direkt an Ihren Händler.

AMS-Uhrenfabrik A. Mayer GmbH
Josef-Zähringer-Str. 103
78120 Furtwangen im Schwarzwald / Germany

INSTRUCTIONS | F 5015

AMS.

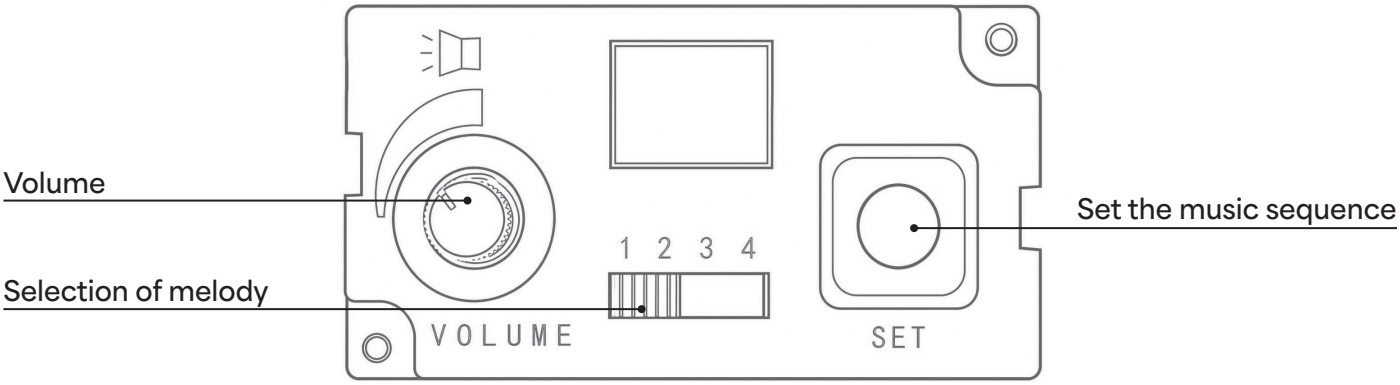

1 2 3 4

Four-sound model:
1. Notre Dame + hour strike
2. Westminster 1 + hour strike
3. Westminster 2 + hour strike
4. 12 world-famous melodies are played in rotation

The above-mentioned hourly time announcements are all made from 06:00 a.m. to 21:00 p.m., and no time announcements are made from 22:00 p.m. to 05:00 p.m.

1. Waltz of the Flowers
2. Twinkle Twinkle Little Star
3. Greensleeves
4. The Blue Danube
5. For Elise
6. Brahms Waltz
7. Beautiful Dreamer
8. Haydn Serenade
9. Schubert Serenade
10. On Wings of Song
11. Serenade
12. Sleep Little Baby

How to start

Insert 2x 1,5 V alkaline battery AA, LR6 into the back of the movement and 2x 1,5 V alkaline battery AA, LR6 for the striking mechanism from above ensuring correct polarity. Hands move to 12 o'clock position. Clock is now searching for a signal. After reception of the DCF signal and internal processing (up to 10min) the clock sets itself automatically to the correct time. Do not move the clock within the reception of the signal. If the clock fails to set, change place, remove batteries and reinsert after 1 minute. Put the clock to final position after successful setting and attach the pendulum. This clock features an automatic night-off function between 10:00 pm and 5:00 am.

Technical Data

Voltage range:	3 V
Permissible operating temp.:	-5°... +50°C
Battery type:	AA/LR6
Time check with transmitter:	9x/24h
Battery life:	12 Mon
Resetting Summer time:	Approx 10 Min

Possible causes of Interferences

Domestic appliances without radio interference suppressors. TV receiver closer than 2 m. Machinery with HF leakage. Within a greater radius around the location of the transmitter, 1500 km and more, topographical and meteorological conditions can have an adverse effect on reception due to the particular coverage of long waves

Faults

Hands do not move after battery has been inserted. Clock does not automatically show correct time, because it has not received a correct signal within 10 minutes after the battery has been inserted.

Procedure

Check correct voltage, contact and polarity of battery. Select a suitable location with sufficient distances to other household appliances. The optimal location is near the window. If the clock does not adjust itself after removal of battery and restart, there is a breakdown at the transmitter. Wait a few hours remove battery and start again.

Dispose of WEEE in an environmentally sound manner Electrical appliances contain harmful substances and valuable resources. Every consumer is therefore legally obliged to hand in waste electrical and electronic equipment at an authorised collection or take-back point. This ensures that they are recycled in an environmentally friendly and resource-saving way. You can hand in old electrical appliances free of charge at your local recycling centre. For more information on this topic, contact your dealer directly.

AMS-Uhrenfabrik A. Mayer GmbH
Josef-Zähringer-Str. 103
78120 Furtwangen im Schwarzwald / Germany