
W7510

AMS.

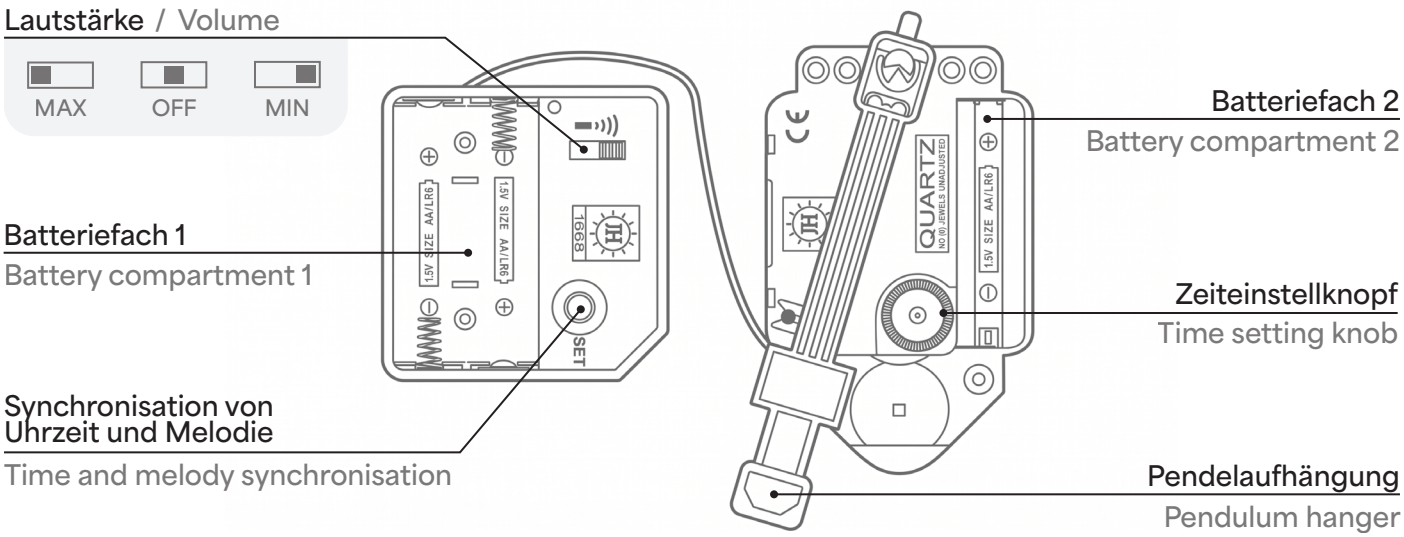

D - Betriebsanleitung

1. Nehmen Sie die Uhr und das Pendel vorsichtig aus der Verpackung.
2. Legen Sie 1 Batterie LR6 (AA) polrichtig in Batteriefach 2 ein.
3. Stellen Sie die Uhrzeit mit dem Zeiteinstellknopf ein.
4. Legen Sie 2 Batterien LR6 (AA) polrichtig in Batteriefach 1 ein.
5. Zeit und Vogelmelodie werden durch Drücken der SET-Taste synchronisiert, damit die Nachtabschaltung richtig funktioniert. Nach dem Einlegen der Batterien ist die Melodie auf 6:00 Uhr voreingestellt. Mit jedem Drücken erhöht sich die Einstellung um eine Stunde. Ist die aktuelle Uhrzeit beispielsweise 10:26 Uhr, drücken Sie die SET-Taste 5-mal (je einmal für 6, 7, 8, 9 und 10 Uhr). Ist die Uhrzeit 11:26 Uhr, drücken Sie die Taste 6-mal. Von 22:00 bis 5:00 Uhr ist die stündliche Vogelmelodie automatisch ausgeschaltet.
6. Einstellen der Lautstärke: Schieben Sie den Lautstärkeschalter nach links für „Aus“, in die Mitte für „Leise“ und nach rechts für „Laut“.
7. Lösen Sie die Pendelaufhängung aus der Rast und hängen Sie das Pendel ein. Achten Sie darauf, dass das Pendel frei schwingen kann.

Elektro-Altgeräte umweltgerecht entsorgen. Elektrogeräte enthalten Schadstoffe und wertvolle Ressourcen. Jeder Verbraucher ist deshalb gesetzlich verpflichtet, Elektro-Altgeräte an einer zugelassenen Sammel- oder Rücknahmestelle abzugeben. Dadurch werden sie einer umwelt- und ressourcenschonenden Verwertung zugeführt. Sie können Elektro-Altgeräte kostenlos beim lokalen Wertstoff-/Recyclinghof abgeben. Für weitere Informationen zu diesem Thema wenden Sie sich direkt an Ihren Händler.

GB - Instructions for use

1. Carefully remove the clock and the pendulum from the packaging.
2. Insert 1 LR6 (AA) battery into battery compartment 2 with correct polarity.
3. Set the time using the time setting knob.
4. Insert 2 LR6 (AA) batteries into battery compartment 1 with correct polarity.
5. Synchronize the time with the bird melody by pressing the SET button, so that the night-time shut-off works correctly. After inserting the batteries, the melody is preset to 6:00. Each press advances the setting by one hour. If the current time is 10:26, for example, press the SET button 5 times (once each for 6, 7, 8, 9 and 10 o‘clock). If the time is 11:26, press the button 6 times. The hourly bird melody is automatically switched off between 22:00 and 5:00.
6. Adjusting the volume: Move the volume switch to the left for „off“, to the middle for „low“ and to the right for „high“.
7. Release the pendulum hanger from its catch and hang the pendulum on it. Make sure the pendulum can swing freely.

Dispose of WEEE in an environmentally sound manner. Electrical appliances contain harmful substances and valuable resources. Every consumer is therefore legally obliged to hand in waste electrical and electronic equipment at an authorised collection or take-back point. This ensures that they are recycled in an environmentally friendly and resource-saving way. You can hand in old electrical appliances free of charge at your local recycling centre. For more information on this topic, contact your dealer directly.

AMS-Uhrenfabrik A. Mayer GmbH

Josef-Zähringer-Str. 103
78120 Furtwangen im Schwarzwald / Germany